

 
Product features and specifications may vary by model. Illustrations and descriptions in this guide are for reference only and may not exactly match your specific TV.




Overview

What's included:





TV Remote

 



2 x AAA Batteries TV Stand for Remote





Screws

Tools required:








Wireless Router (needed for streaming)







Internet Connection (needed for streaming)

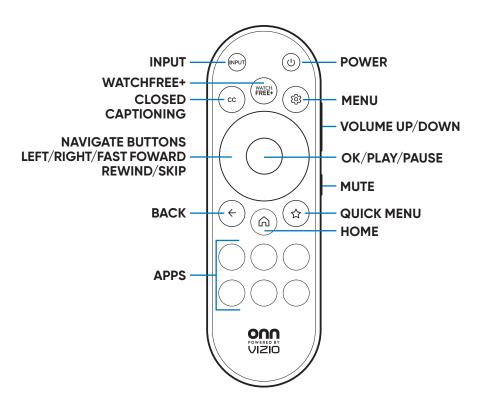

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

For product assistance & missing or replacement parts:

WE CAN HELP

1-844-334-2355

7 DAYS/WEEK 9:00am - 9:00pm EST

ONLINE CHAT:

onntvsupport.com

EMAIL:

customerservice@onntvsupport.com



SCAN HERE

Register your product to activate your two-year warranty.*

*1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.

Find more at Walmart.com

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.


Assembly

1. INSTALLING THE STANDS

Using a **Phillips screwdriver**

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

- Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
- Use a Phillips screwdriver to attach each stand with the provided screws. Make sure the stand screws are fully tightened and the stands do not shift or move.
- 3. Place the TV upright on a stable, level surface.

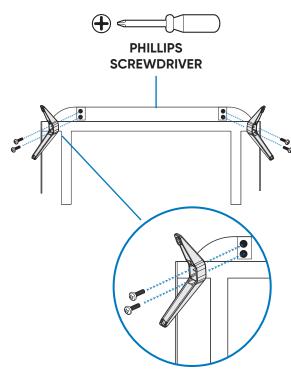

2. CONNECTING DEVICES

HDMI

connect a Blu-ray, DVD player, gaming console or other devices

DIGITAL

 
OPTICAL

connect an external digital audio system


COAXIAL

connect to antenna/cable

Best Quality

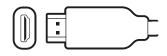

Better Quality

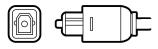 


Good Quality



2. CONNECTING DEVICES (continued)

USB

 connect for photos, music, movies and more

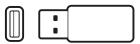

CONNECTING TO POWER

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

Setup

ACTIVATION:

Have your mobile device ready for the VIZIO app download.

If you have a wireless network, have the network password ready.

The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready to watch.

NOTE:

VIZIO doesn't charge for activation support - beware of scams.