


# QUICK START GUIDE

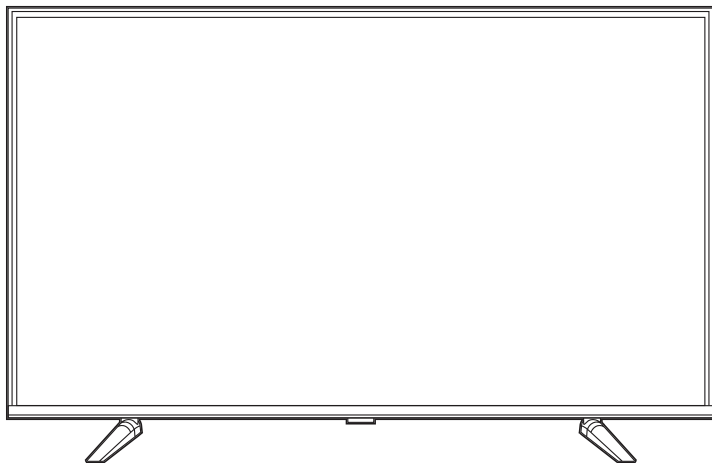


onn • Roku TV



Product features and specifications may vary by model. Illustrations and descriptions in this guide are for reference only and may not exactly match your specific TV.

# Overview


## What's included:

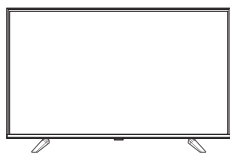


**onn • Roku TV**



 TV Remote



2 x AAA Batteries  
for Remote

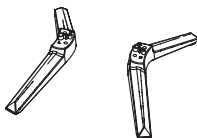


TV Stand



Screws

## Tools required:

 

Phillips  
Head  
Screwdriver




Wireless  
Router  
(needed for  
streaming)



Computer,  
Tablet, or  
Smartphone  
(needed for setup)



Internet  
Connection  
(needed for  
streaming)

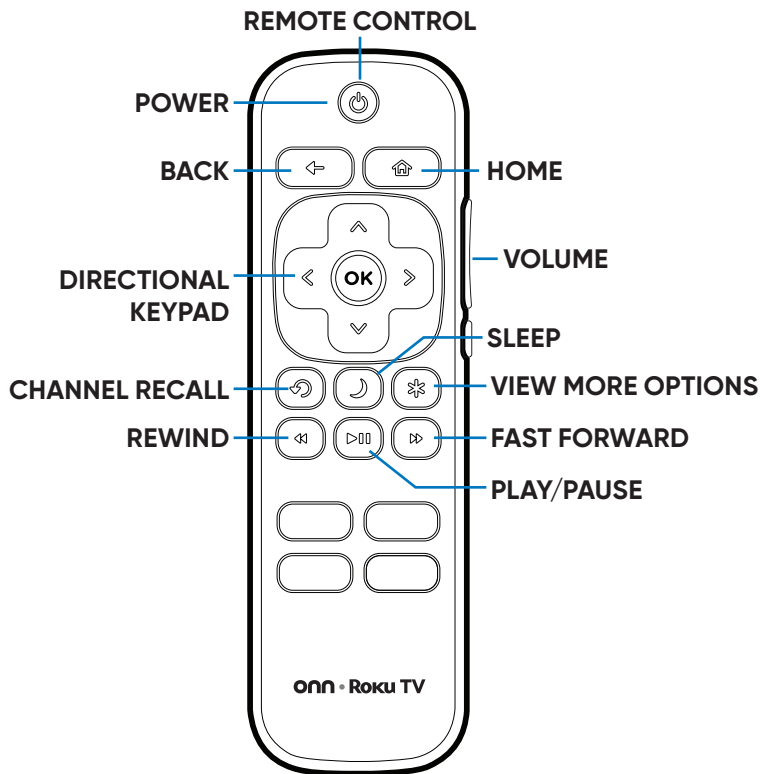

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

For product assistance & missing or replacement parts:

**WE CAN HELP**

**1-844-334-2355**

7 DAYS/WEEK 9:00am – 9:00pm EST

**ONLINE CHAT:**

[onntvsupport.com](https://onntvsupport.com)

**EMAIL:**

[customerservice@onntvsupport.com](mailto:customerservice@onntvsupport.com)



**SCAN HERE**

Register your product to activate  
your two-year warranty.\*

\*1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.

Find more at **Walmart.com**

We recommend keeping your TV box for the duration of  
your warranty. See your product warranty for details.


# Assembly

## 1. INSTALLING THE STANDS

Using a **Phillips screwdriver**

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

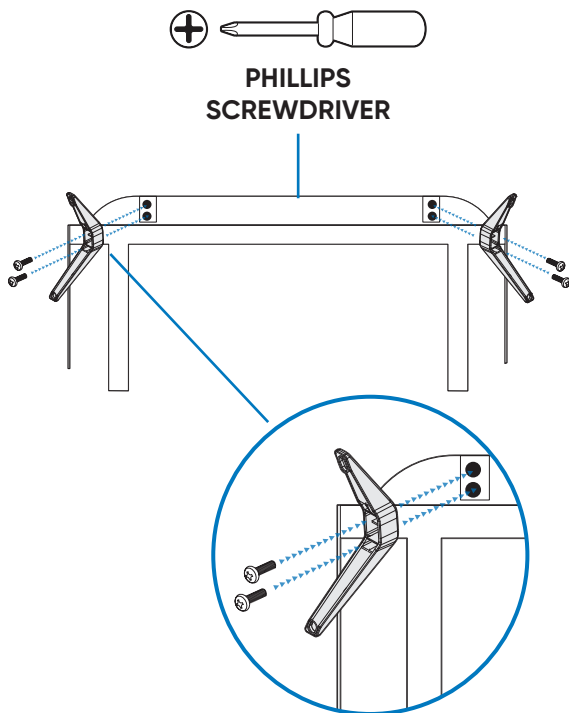


## 2. CONNECTING DEVICES

### HDMI

connect a Blu-ray,  
DVD player, gaming  
console or other devices

 
#### Best Quality



### DIGITAL OPTICAL

connect an external  
digital audio system

 
#### Better Quality



### AV IN / COMPOSITE

connect an  
external AV device

#### Good Quality

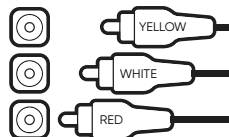

### COAXIAL

 
connect to  
antenna/cable



## 2. CONNECTING DEVICES (continued)

### LAN

wired connection  
to the internet (4K models only)




### HEADPHONE

connect headphones  
or external speakers



### USB

 connect for photos, music,  
movies and more



## CONNECTING TO POWER

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

# Setup

## ACTIVATION:

Have your wireless network name and password handy.

Follow the on-screen instructions on your onn™ Roku TV. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Activate your onn™ Roku TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your onn™ Roku TV and access entertainment across thousands of streaming channels.

## NOTE:

Roku doesn't charge for activation support - **beware of scams.**

Visit [go.roku.com/tvmanual](https://go.roku.com/tvmanual)  
for the complete Roku User Guide.