

onn.TM • **Roku TV**

Quick Start Guide

 
Roku, Roku TV, the Roku logo, and the purple d-pad design are trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

What's in the Box?

Check to make sure you have everything below.



onn. • Roku TV



TV Stand



Screws



TV Remote



2 x AAA Batteries
for Remote

What you need:



Phillips
Head
Screwdriver



Wireless
Router
(needed for
streaming)



Computer,
Tablet, or
Smartphone
(needed for setup)



Internet
Connection
(needed for
streaming)


Installing the Stands

01

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

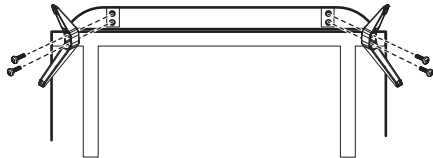


Grab your remote

02

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

- A** Power
- B** Back
- C** Directional keypad
- D** Channel recall
- E** Rewind
- F** Sleep
- G** Home
- H** Volume
- I** View more options
- J** Fast forward
- K** Play/Pause

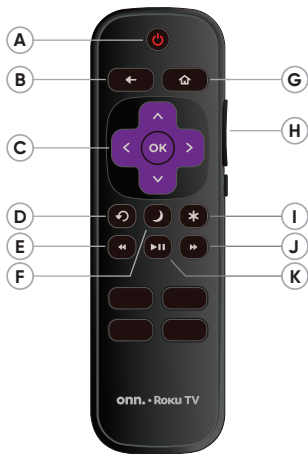

Visit [go.roku.com/tvmanual](https://www.go.roku.com/tvmanual) for the complete Roku User Guide.

Connecting Devices

03

HDMI
connect a Blu-ray, DVD player, gaming console or other devices

Best Quality




Digital Optical
connect an external digital audio system

Better Quality




Component
connect an external AV device

Good Quality

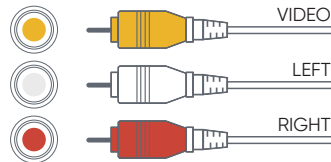


Coaxial
connect to antenna/cable

 


Connecting Devices (continued)

 LAN*
wired connection
to the internet



 Headphone
connect headphones
or external speakers



USB
connect for photos, music,
movies and more



Connecting to Power

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

*4K models only

Setup & Activation


04

Tip: Have your wireless network name and password handy.

Follow the on-screen instructions on your **onn.™ • Roku TV**. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Activate your **onn.™ • Roku TV** using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your **onn.™ • Roku TV** and access entertainment across thousands of streaming channels.

Note: Roku doesn't charge for activation support - **beware of scams.**

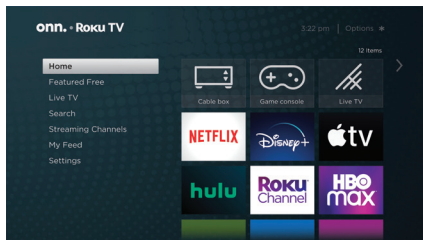

Your Entertainment, Your Way

With your Roku TV, you can now stream a massive selection of free, live, and premium TV. Stay on top of what's trending with the hottest shows, events, and live news. Even customize your home screen with your favorite channels for lightning-quick access. Welcome to a new world of streaming.*

*Resolution is based on TV compatibility and varies by channel and content. Channels are subject to change, vary by region, and may require payment.

Customer Support & Warranty

Online Chat: www.onntvsupport.com

Email: customerservice@onntvsupport.com

call or text* Customer Support at

844-334-2355

9am – 9pm EST daily

Visit go.roku.com/tvmanual for the complete Roku User Guide.

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

©2022 Walmart
onn. is a trademark of Walmart
All Rights Reserved.

*Message and data rates may apply.



**Register your product
to activate your
two-year warranty***

Scan the QR code with your
smartphone camera and follow
the on-screen instructions or
visit **onntvsupport.com**.

*1 year manufacturer warranty with purchase or 2 year warranty with product registration within 90 days of purchase.