

 


**24" HD 720P TV**  
**Model: 100012590**  
**Quick Start Guide**

\*Roku, Roku TV and the Roku logo are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

## What's in the Box?

Check to make sure you have everything below.



onn. • Roku TV



TV Stand



4 Screws



TV Remote



2 x AAA Batteries  
for Remote

## What you need:



Phillips Head  
Screwdriver



Wireless  
Router  
(needed for  
streaming)



Computer,  
Tablet, or  
Smartphone  
(needed for setup)



Internet  
Connection  
(needed for  
streaming)


## Installing the Stands

01

Do not install the stands if you want to wall mount your TV. See your wall mount instructions or chat live at [www.onntvsupport.com](http://www.onntvsupport.com).

**You will need:** Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

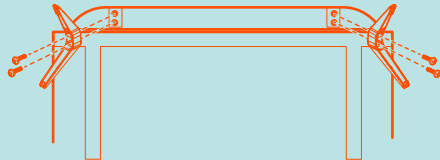


## Grab your remote

02

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.


- A** Power
- B** Back
- C** Directional keypad
- D** Channel recall
- E** Rewind
- F** Sleep
- G** Home
- H** Volume
- I** View more options
- J** Fast forward
- K** Play/Pause

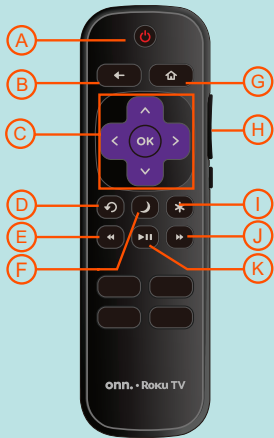


Visit [go.roku.com/tvmanual](https://go.roku.com/tvmanual) for the complete Roku User Guide.

## Connecting Devices

03

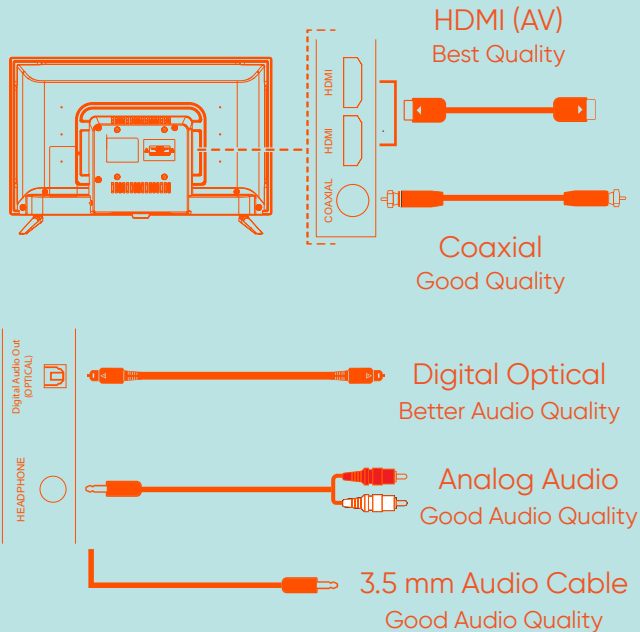

## Connecting Devices (Continued)

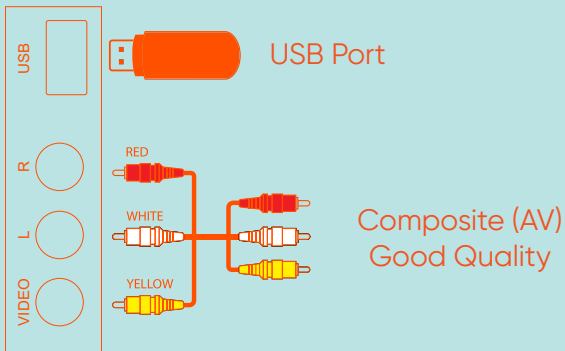

### Connecting to Power

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

\*Actual placement of TV ports may vary by model.

## Setup & Activation


04

**Tip:** Have your wireless network name and password handy.

Follow the on-screen instructions on your **onn.™ • Roku** TV. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Activate your **onn.™ • Roku** TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your **onn.™ • Roku** TV and access entertainment across thousands of streaming channels.

**Note:** Roku doesn't charge for activation support – **beware of scams.**

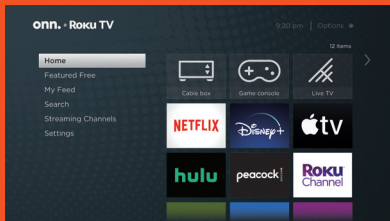

## Endless Entertainment

Stream what you love, including free TV, live news, sports, and more. Never miss the most talked-about events, award-winning shows, latest blockbuster hits, and more. It's easy to stream what you love and cut back on cable bills with access to 500,000+ movies and TV episodes across thousands of free and paid channels.\*

\*Content resolution is based on TV compatibility and may vary by channel. Channels are subject to change, vary by region, and may require payment.

## Customer Support & Warranty

**Online Chat:** [www.onntvsupport.com](http://www.onntvsupport.com)

**Email:** [customerservice@onntvsupport.com](mailto:customerservice@onntvsupport.com)

**Customer Support:**

**844-334-2355**

**9am – 9pm EST daily**

Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for the complete Roku User Guide.

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

© 2020 Walmart

onn. is a trademark of Walmart  
All Rights Reserved.

# 2 YEAR WARRANTY\*

Text "ONN REGISTER" to "888111"

\*1 year manufacturer warranty with purchase or 2 year warranty with product registration. Message and data rates may apply.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

