

 


**60" 4K UHD HDR10 TV**  
**Model: 100024699**  
**Quick Start Guide**

\*Roku, Roku TV, and the Roku logo are the trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.

## What's in the Box?

Check to make sure you have everything below.



onn. • Roku TV



TV Stand



4 Screws



TV Remote



2 x AAA Batteries  
for Remote

## What you need:



Phillips Head  
Screwdriver



Wireless  
Router  
(needed for  
streaming)



Computer,  
Tablet, or  
Smartphone  
(needed for setup)



Internet  
Connection  
(needed for  
streaming)

## Installing the Stands

01

Do not install the stands if you want to wall mount your TV. See your wall mount instructions or chat live at [www.onntvsupport.com](http://www.onntvsupport.com).

**You will need:** Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

 


## Grab your remote

02

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.


- A** Power
- B** Back
- C** Directional keypad
- D** Channel recall
- E** Rewind
- F** Sleep
- G** Home
- H** Volume
- I** View more options
- J** Fast forward
- K** Play/Pause

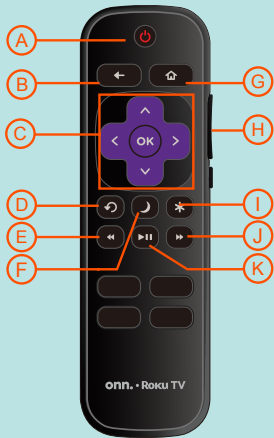


Visit [go.roku.com/tvmanual](https://go.roku.com/tvmanual) for the complete Roku User Guide.

## Connecting Devices

 03

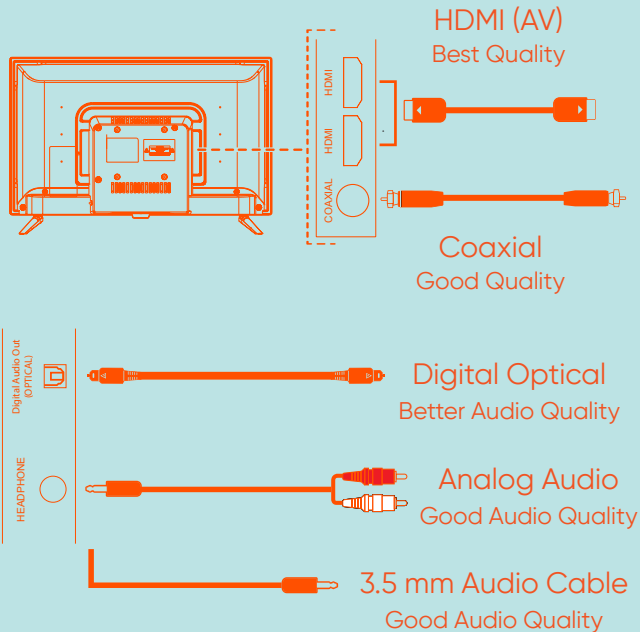

## Connecting Devices (Continued)

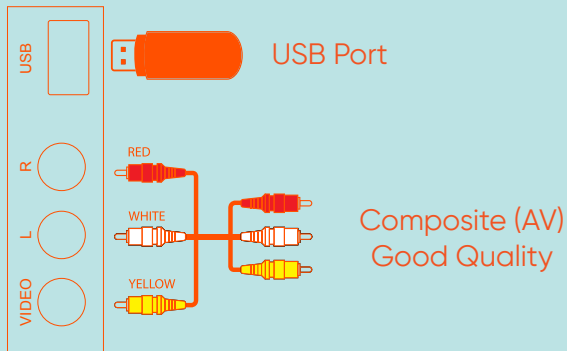 

### Connecting to Power

After connecting all your devices, connect the power cord to a power outlet. The TV enters standby mode and its indicator light turns red.

\*Actual placement of TV ports may vary by model.

## Setup & Activation

 
04

**Tip:** Have your wireless network name and password handy.

Follow the on-screen instructions on your **onn.™ • Roku TV**. If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

Activate your **onn.™ • Roku TV** using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your **onn.™ • Roku TV** and access entertainment across thousands of streaming channels.

**Note:** Roku doesn't charge for activation support – **beware of scams**.

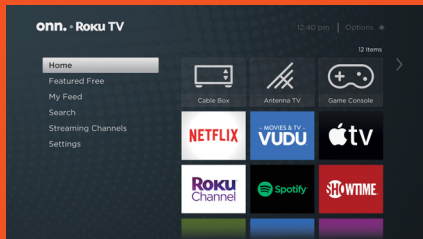

## Endless Entertainment

Stream what you love, including free TV, live news, sports, and more. Never miss the most talked-about events, award-winning shows, latest blockbuster hits, and more. It's easy to stream what you love and cut back on cable bills with access to 500,000+ movies and TV episodes across thousands of free and paid channels.\*

\*Payment required for some channels and content. 4K and HDR require 4K and HDR content, is not available on all channels and is subject to channel provider bandwidth. Channels are subject to change and vary by region.

## Customer Support & Warranty

**Online Chat:** [www.onntvsupport.com](http://www.onntvsupport.com)

**Email:** [customerservice@onntvsupport.com](mailto:customerservice@onntvsupport.com)

**Customer Support:**

**844-334-2355**

**9am – 9pm EST daily**

Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for the complete Roku User Guide.

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

© 2020 Walmart

onn. is a trademark of Walmart

All Rights Reserved.

# 2 YEAR WARRANTY\*

Text "ONN REGISTER" to "888111"

\*1 year manufacturer warranty with purchase or 2 year warranty with product registration. Message and data rates may apply.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

